

Fig. 15: C9900-U332_mounting plate

Disposal of the battery pack

When disposing of the battery pack, be sure to observe the national electronic waste regulations.

For disposal, you must remove and dismantle the battery pack.

To dismantle the battery pack, follow the steps shown in the figures below:

1. Loosen the screw of the ground connection plate with a 3.0 mm Allen key to remove the ground connection plate (section A).
2. Loosen the four M4 x 12 screws (section B).
3. Remove the mounting plate (section C).

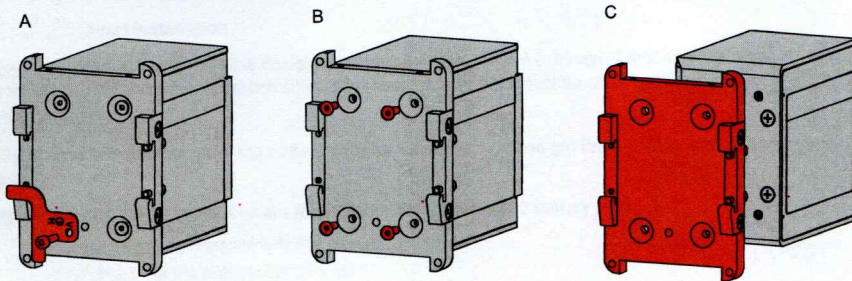


Fig. 16: C9900-U332_remove mounting plate

4. Remove the two M4 x 6 screws on the back of the battery pack (section D).
5. Remove the two M3 x 10 screws and the clamp on the front of the battery pack (section E).
6. Pull the angle plate over the front from the housing (section F).

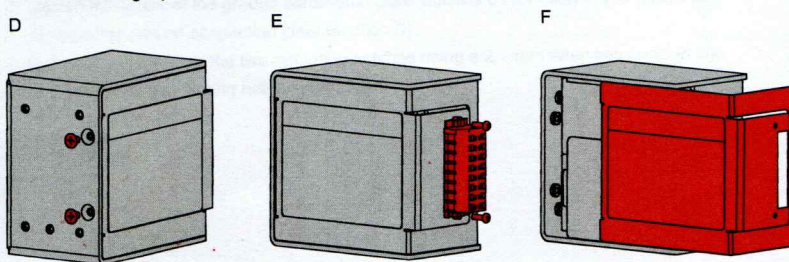


Fig. 17: C9900-U332_remove angle plate