

Contents

WARNINGS AND NOTICES	II
ELECTROSTATIC DISCHARGE AWARENESS	III
REGULATORY COMPLIANCE	IV
CHAPTER 1. GENERAL INFORMATION.....	1
Introduction.....	1
Description.....	1
Theory of Operation.....	2
CHAPTER 2. INSTALLATION.....	8
Introduction.....	8
Unpacking.....	8
Location	8
Installation	8
Electrical Connections.....	9
Connections to the Generator	9
Connections to Load Sharing and Speed Control.....	10
CHAPTER 3. CALIBRATION AND CHECKOUT PROCEDURE	14
Introduction.....	14
General Information.....	14
Pre-Checkout.....	14
Dwell Time Adjustment.....	15
Test and Adjustment.....	15
Dynamic Check	17
CHAPTER 4. SERVICE OPTIONS	19
Product Service Options.....	19
Woodward Factory Servicing Options.....	20
Returning Equipment for Repair.....	20
Replacement Parts	21
Engineering Services.....	21
How to Contact Woodward.....	22
Technical Assistance.....	22
SPM-A SYNCHRONIZER SPECIFICATIONS	23

Illustrations and Tables

Figure 1-1. Control Outline Drawing.....	4
Figure 1-2. System Block Diagram.....	5
Figure 1-3. Functional Block Diagram.....	6
Figure 1-4. Plant Wiring Diagram.....	7
Figure 2-1. Typical SPM-A Synchronizer Wiring.....	12
Figure 2-2. Synchronizing Bus to Bus.....	13
Figure 3-1. Dwell Time Setting Switches.....	15