


Connector Data


Use these illustrations to identify the IAM and AM power module features and indicators.

IAM Power Module Features and Indicators

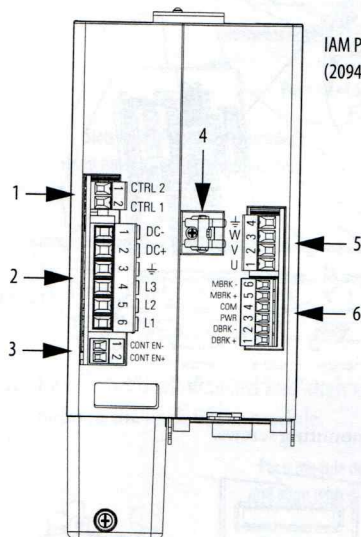

IAM Power Module, Top View
(2094-BC01-MP5-M is shown)

IAM Power Module, Front View
(2094-BC01-MP5-M is shown)

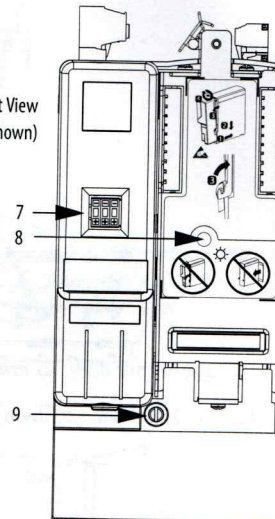

Item	Description
1	Control power (CPD) connector
2	DC bus/AC input power (IPD) connector
3	Contactor Enable (CED) connector
4	Motor cable shield clamp
5	Motor power (MP) connector

Item	Description
6	Motor/resistive brake (BC) connector
7	Node address switch
8	Power-applied indicator
9	Mounting screw



ATTENTION: To avoid damage to equipment, do not mount your Bulletin 2094 control module to the power module when the Power-applied indicator is on. Remove all input power from the IAM power module before mounting the control module.