


AM Power Module Features and Indicators

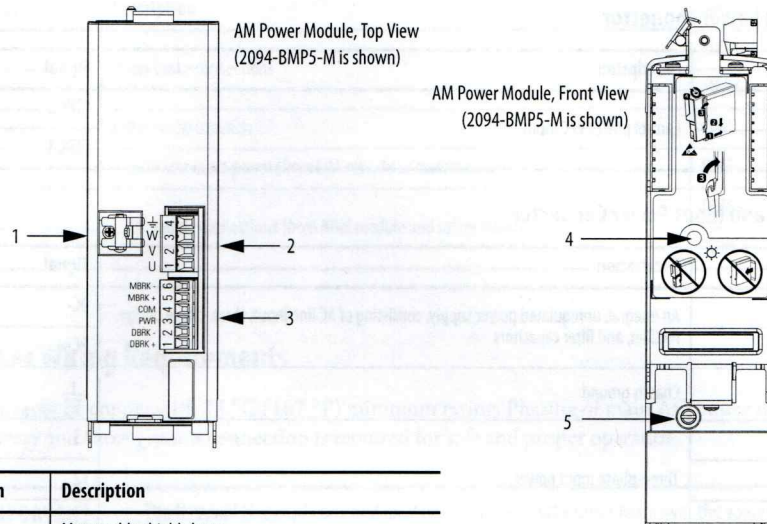

Item	Description
1	Motor cable shield clamp
2	Motor power (MP) connector
3	Motor/resistive brake (BC) connector
4	Power-applied indicator
5	Mounting screw



ATTENTION: To avoid damage to equipment, do not mount your Bulletin 2094 control module to the power module when the Power-applied indicator is on. Remove all input power from the IAM power module before mounting the control module.

IAM/AM Module Connectors

Designator	Description	Connector	Module
CPD	Control input power (drive)	2-position plug/header	IAM
IPD	VAC input power (drive) and DC bus	6-position plug/header	IAM
CED	Contactor enable	2-position plug/header	IAM
MP	Motor power	4-position plug/header	IAM/AM
BC	Motor/resistive brake	6-position plug/header	IAM/AM